


WINCE 7.0 Software Update Process

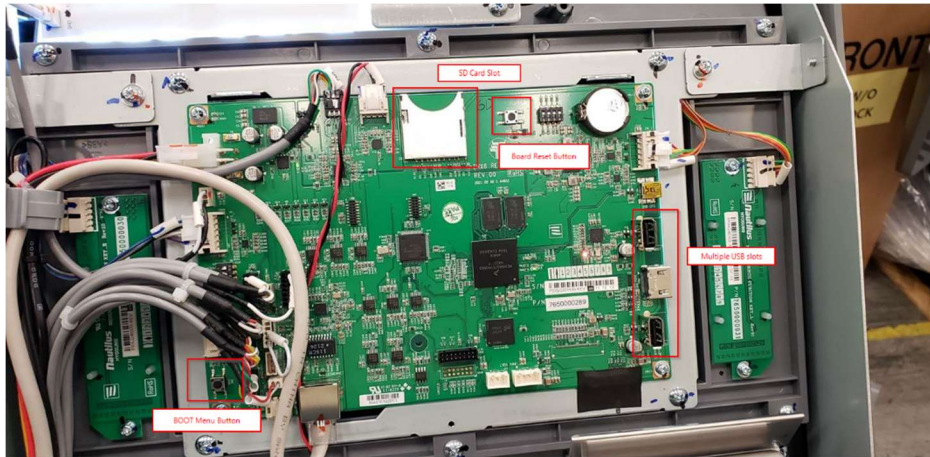

SD Card O.S. & B-L Updating

1. Unzip the .zip file that you downloaded from the www.NHATM.com website. Copy the .NB0 files and (if provided) the “Update7” folder to your SD Card.
2. Insert the loaded SD card into the SD card slot on the mainboard.
3. Press and hold the Boot menu button.
4. Press and release the Reset button.
5. The machine will reboot and load the Diagnostic Mode.
6. Select the SD CARD option.
7. Select Format & Upgrade to reset the ATM application to Factory Defaults.
8. Select Upgrade to update the O.S. & B-L and retain current ATM settings.

AP USB/SD Card Updating

1. Unzip the .zip file that you received from SoftwareOrders or that you downloaded from the www.NHATM.com website. Copy the “Update7” folder to your USB or SD Card.
2. Insert the loaded USB or SD card into their respective slots on the mainboard.
3. At the ATM In-Service screen, press ENTER, CLEAR, CANCEL 1, 2, 3
4. Input the Operator/Service/Master Password for the ATM.
5. Navigate to System Setup \ System Control \ Software Update \ USB Software Update
6. Press ‘YES’
7. The ATM will reboot and launch the SWUpdate process. Once finished, the ATM will boot up into service.

SD Card/USB formatting requirements

The supported file systems are FAT and FAT32. The file size is no longer limited to 4GB as was common with CE5.0 and CE6.0 operating systems.